

Parts List

Seat Slat (x7)
Daintree Support (x2)
Bugle Screw 14g x 75 mm (x14)
50 x 25 x 1410 mm Cross arm (x1)
Back Strap (x1)
25 mm Hex Screw (x1)
35 mm Hex Screw (x7)



Instructions

Step 1 Place the two seat support standing upright approximately 1400 mm apart. Note each support has a rectangular cutout which should face toward the other support.


Step 2 Place the cross bar into the cutout slots between the supports. The cross bar has a pre-drilled hole for fixing the back strap to, face it toward the rear of the seat.

Step 3 Using a 5 mm hexagonal drive, loosely screw the seat slats to the supports using the 75 mm bugle screws, beginning with the base from front. Once all the slats are located correctly, drive the screws fully, taking care not to over tighten and strip the thread.

Step 4 Fit the back strap to the centre of the seat by driving the 25 mm hex screw into the pre-drilled hole in the aluminium bar.

Step 5 Check that the slats and support are straight and aligned correctly. When satisfied that the slats are straight, not bowed up or down, drill a 4 mm hole through the holes in the metal back strap, about 20 mm into the plastic slat. Then fix into position with the 35 mm hex screw.

Diagram

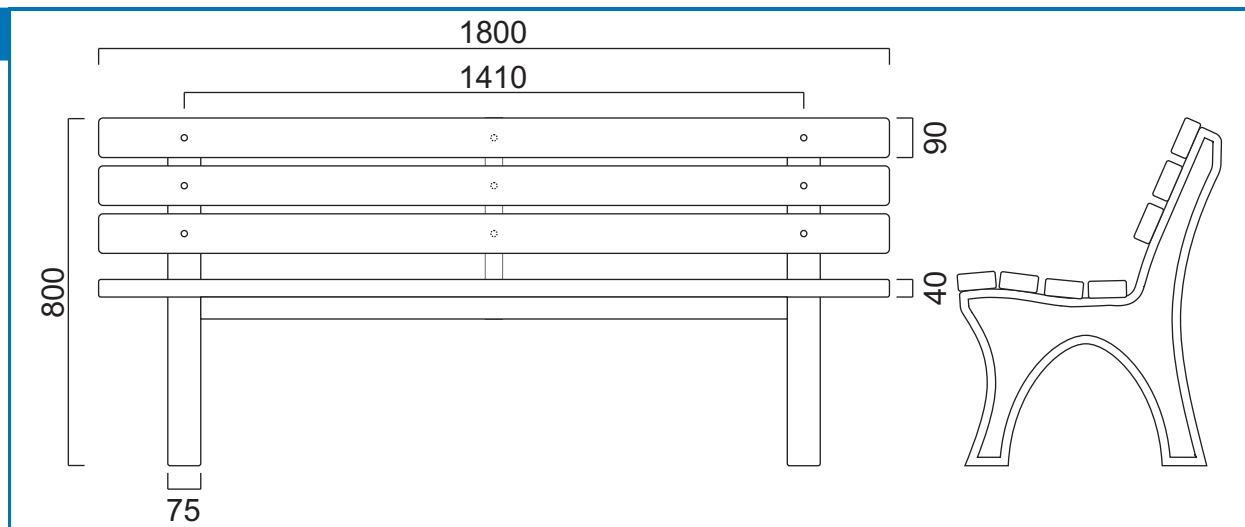

All dimensions are in millimetres (mm) unless specified.

If you require further assistance, please contact your supplier.

Rev: 3