

Parts List

Seat Slat (x7)	50 x 25 x 3210 mm Crossarm (x1)
Daintree Support (x3)	Back Strap (x2)
Bugle Screw 14g x 75 mm (x21)	25 mm Hex Screw (x4)
35 mm Hex Screw (x14)	

Instructions


Step 1 Place the cross arm through the centre support and between the left & right supports into the slots provided.

Step 2 Using 5 mm hexagonal drive, partly screw the bottom slats into the supports and then the rear slats. Once all slats are in place ensure the end of the slats are square, then tighten all screws taking care not to over tighten as this could strip the screws.

Step 3 Flip the seat over and place the back straps on the seats, these should be placed in the centre between the supports for both sides. Screw in the back strap to the cross bar. Pre-drill 5 mm holes & fix with 25 mm hex screws.

Step 4 Once the screws in back strap are tightened, drill a 4.5 mm hole through the holes in the back strap into the seat slats. Secure them in using 35 mm hex screws.

Diagram

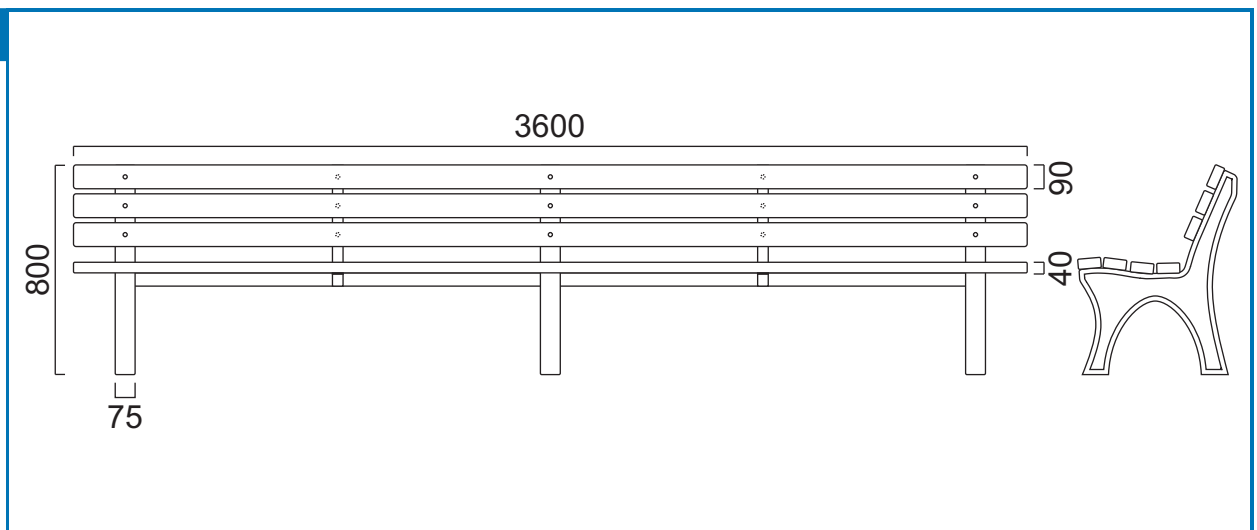

All dimensions are in millimetres (mm) unless specified.

If you require further assistance, please contact your supplier.

Rev: 3