



ASSEMBLY INSTRUCTIONS

IMPORTANT: Please read carefully before assembling.

Free Standing 1.1m Seats



KIMBERLEY



KAKADU



DAINTREE

PLEASE NOTE: Top back and bottom front slats have both outside edges rounded.

1. Using a 5mm hexagonal drive, part screw (a couple of turns only) each slat onto their respective seat supports starting from back of the seat to the front, then from the bottom of the back support to the top.
2. Ensure that the seat slats are at right angles to the supports and that the supports are vertical.
3. Finally tighten all screws taking care not to over tighten as this could strip the thread in the seat support.


COMPONENTS LIST

KIMBERLEY / KAKADU

6 x Seat Slat—40mm x 90mm
 Note: Top and Bottom Slats have rounded edge
 2 x Seat Supports
 12 x Bugle Screw—14g x 75mm

DAINTREE

7 x Seat Slat—40mm x 90mm
 Note: Top and Bottom Slats have rounded edge
 2 x Seat Supports
 14 x Bugle Screw—14g x 75mm

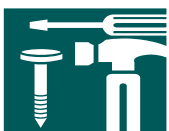

If you require further installation assistance, please contact your supplier.

www.replas.com.au

enviroPLAS
PRODUCTS