



ASSEMBLY INSTRUCTIONS  
**IMPORTANT: Please read carefully before assembling.**

**PREMIER  
SETTING  
1.8m  
In Ground**



In Ground image not available

1. Place Table & Bench tops face down on a flat surface.
2. Place supports inside metal frame.
3. Using the drill bit supplied, drill into the support through the pilot hole in the metal frame.
4. Using the TRILOBE Screws and Bit supplied, screw support onto frame.

**Handy Hint**

When installing an In-Ground setting, it is a good idea to nail a timber plank to the sides of the supports ensuring that the posts are parallel. This will also help align the supports and will eliminate any sagging of the table planks and bench slats.

Place the supports (with the timber bracing still attached) into the holes and pack the concrete mix around the bottom of each support. At this stage it is important to use a spirit level to check that the planks and slats are horizontal and the supports are vertical.

Once the concrete has set, remove the bracing.

**COMPONENTS LIST**


TABLE:

1 X Table Top - pre-assembled  
2 X Table Supports  
20 X 10g x 40mm Trilobe Screws

BENCHES:

2 X Bench Tops - pre-assembled  
4 X Bench Supports  
24 X 10g x 40mm Trilobe Screws

Also: 1 x Drill Bit & 1 x Trilobe Bit

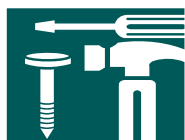

If you require further installation assistance, please contact your supplier.

[www.replas.com.au](http://www.replas.com.au)

**enviroPLAS  
PRODUCTS**