



## ASSEMBLY INSTRUCTIONS

**IMPORTANT: Please read carefully before assembling.**

# PREMIER SLIMLINE SETTING 1.8m Free Standing



Table has 8 slats not 9 as per image

1. Place Table & Bench tops face down on a flat surface.
2. Place supports inside metal frame.  
NOTE: Ensure that the Table Supports have the counter sink holes facing outwards on the support upright
3. Using the 75mm bugle screws supplied, fit crossarm between the two table supports.
4. Using the drill bit supplied, drill into the support through the pilot holes in the metal frame.
5. Using the TRILOBE Screws and Bit supplied, screw support onto frame.
6. Once all screws have been tightened, turn setting over and place into position


## COMPONENTS LIST

### TABLE:

1 X Table Top - pre-assembled  
2 X Table Supports  
1 X Table Crossarm  
4 X 14g x 75mm Bugle screws  
20 X 10g x 40mm Trilobe Screws

### BENCHES:

2 X Bench Tops - pre-assembled  
4 X Bench Supports  
24 X 10g x 40mm Trilobe Screws  
Also: 1 x Drill Bit & 1 x Trilobe Bit

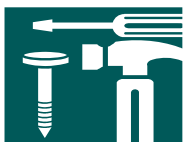

If you require further installation assistance, please contact your supplier.

[www.replas.com.au](http://www.replas.com.au)

**enviroPLAS**  
PRODUCTS