

Installation Guide

Wheel Stops and Speed Humps


Mushroom Head Spike®

150 mm for Wheel Stops and 125 mm for Speed Humps


1. Place fixture in desired position.
2. Mark spike positions for drilling.
3. Wear appropriate safety glasses.
4. Drill holes to 80 mm depth using a 10 mm masonry drill bit.
5. Remove dust from hole using dust blower or pump.
6. Check depth of hole is 80 mm
7. Align fixture with holes, assemble washer on spike & place in holes.
8. Drive spike into holes using a 3 kg or heavier Lump/Club hammer.



Step 4

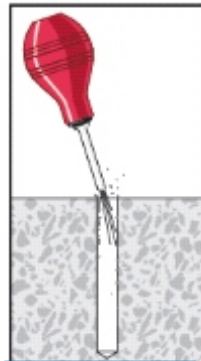

Step 6

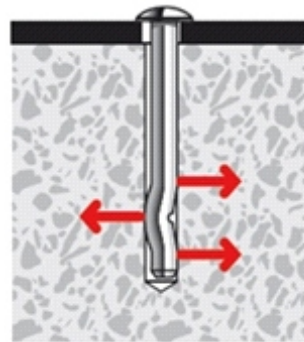

Mushroom Head Spike®



Speed Hump

Note: FOR LARGER VOLUME INSTALLATIONS we recommend the use of a 5 kg SDS Max Rotary Hammer Drill and WDS Max Spike Tool.

Details can be obtained from your Replas representative.

IMPORTANT NOTES

Do not install spikes before 80 mm hole depth is confirmed.

For optimum performance, concrete must be a minimum of 100 mm.

New concrete must be cured for at least two weeks prior to installation.