

Parts List

Beachcomber Back (x1)
Beachcomber Base (x1)
Kakadu Support (x3)
75 mm Bugle Screw (x12)




Instructions

We recommend assembling our products on a flat surface, taking care not to damage the plastic.

- Step 1:** Place the three Kakadu supports standing upright approximately 700 mm apart. Take note they may be marked L, C, R (Left, Centre, Right)
- Step 2:** Take the base of the seat and place it onto the supports so that the pre-drilled holes in the base align with the fixing holes in the supports.
- Step 3:** Drive in the 75 mm Bugles screws partially into the base. Do not tighten these fully yet.
- Step 4:** Repeat Steps 2 & 3 for the Back profile.
- Step 5:** Once all screws are in place, tighten fully. Be careful not to over-tighten as it may strip the thread.

Diagram

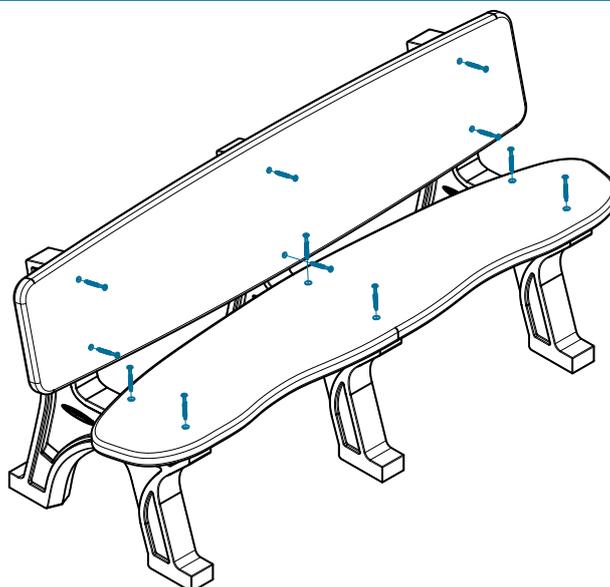

All dimensions are in millimetres (mm) unless specified.

If you require further assistance, please contact your supplier.