


Instructions

Step 1: Drill pilot holes in the concrete with the recommended spacing as per the diagram below.

Step 2: Place the Guard Rail Blocks in position over the holes & fix in with 12mm Concrete Anchors. Ensure the blocks are in line & square with each other before fully tightening.

Step 3: Place the bumper rail on top of the now fixed blocks & secure to the blocks with two 125 mm bugle screws per block.

Diagram

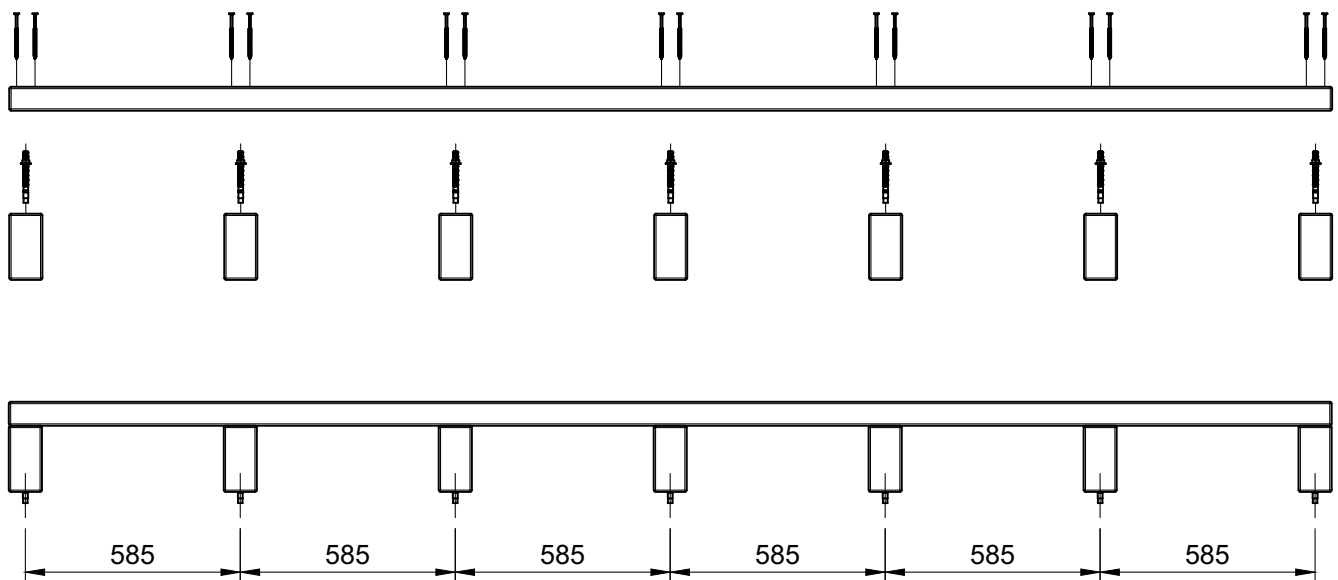

All dimensions are in millimetres (mm) unless specified.

If you require further assistance, please contact your supplier.

Ver 1 -