

Assembly Instructions Kakadu 2 Support - 900 mm FS

1800 REPLAS

Parts List

Seat Slat (x6)


Kakadu Support (x2)

Bugle Screw 14g x 75 mm (x12)



Instructions

Step 1	Using a 5 mm hexagonal drive, partly screw each slat onto the supports. Fixing the bottom slats first is recommended.
Step 2	Ensure that the supports are vertical and slats are square with the supports.
Step 3	Finally tighten all screws, taking care not to over tighten as this could strip the screws.

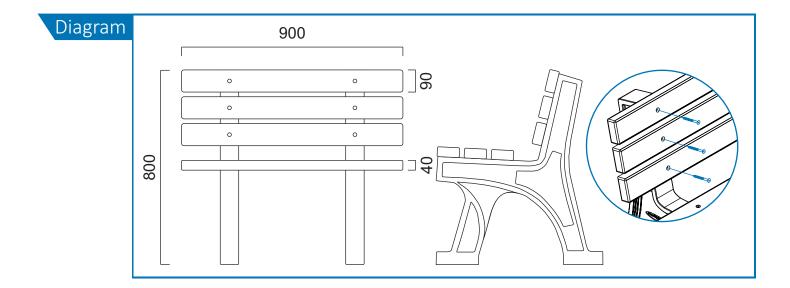

All dimensions are in millimetres (mm) unless specified.