


Parts List

Seat Slat (x6)
Kimberley Support (x5)
Bugle Screw 14g x 75mm (x30)

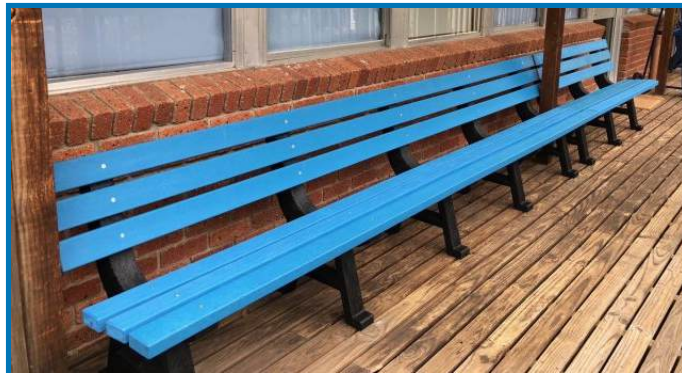

Instructions

Step 1 Using 5mm hexagonal drive, partly screw the bottom slats into the supports and then the rear slats. Once all slats are in place ensure the end of the slats are square, then tighten all screws taking care not to over tighten as this could strip the screws.

Step 2 Ensure that the seat slats are at right angles to the supports and supports are vertical.

Step 3 Finally tighten all screws taking care not to over tighten and this could strip the screws.

Diagram

