


### PROFILE FIXING


Use a 75 mm bugle screw in the centre post.  
One screw per profile.

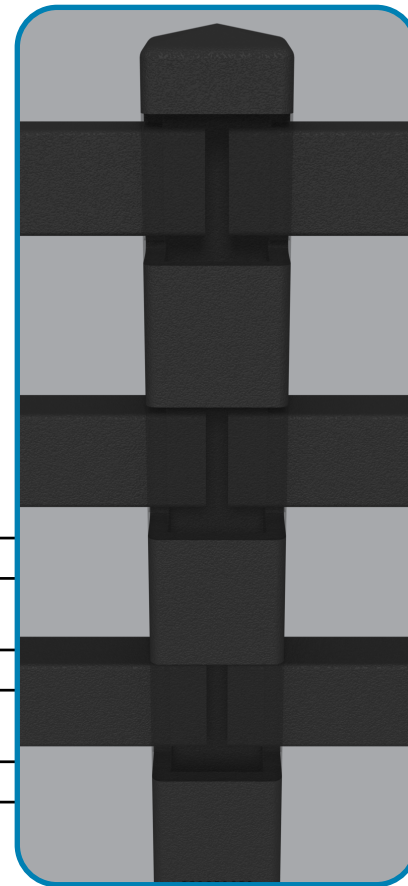

### PROFILE SPACING

Have a 20 mm gap between profiles to allow for expansion.


20

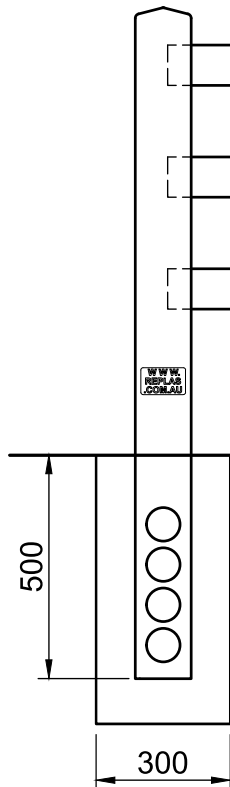

### POST INSTALLATION

Posts must be at least 500 mm deep.  
Allow an additional 100 mm space on all sides of the post and fill with concrete.

Temporary bracing to ensure the post stays in position while setting is recommended.

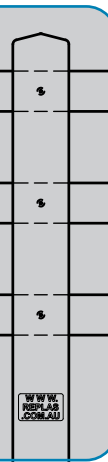

### POST SPACING

The maximum distance between centres of posts for full length profiles is 1810 mm.

This may change depending on your install requirements.

1810

