


### Parts List

Ramp Half (x2)
Support Post (x2)
120 mm Coach Bolt (x4)

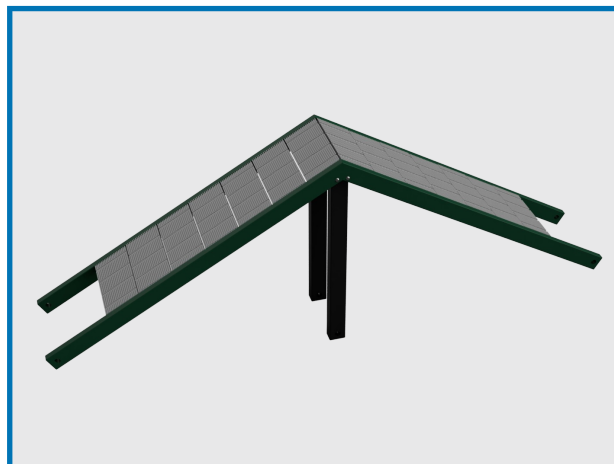

### Instructions

**We recommend assembling our products on a flat surface, taking care not to damage the plastic.**

**Step 1:** Dig out the 8 holes for mounting the supports as per the hole layout provided.

**Step 2:** Fix the long legs (loosely) to the top section of the bridge with the cup head bolts provided and brace upright in position.


**Step 3:** Bring the ramps to the top section and fix to the top by securing the cup head bolts through the pre-drilled holes into the supports, then drive the 45mm wafer screws into the metal brackets.

**Step 4:** When the ramps are correctly aligned with the top, check that the legs are square then proceed to tighten all bolts that join the ramps and the legs.

**Step 5:** Place the remaining short legs into position (about half way down the ramp) and secure with cup head bolts.

**Step 6:** Brace well to prevent movement, fill holes with concrete, making sure that it is firmly packed around the posts.

### Diagram

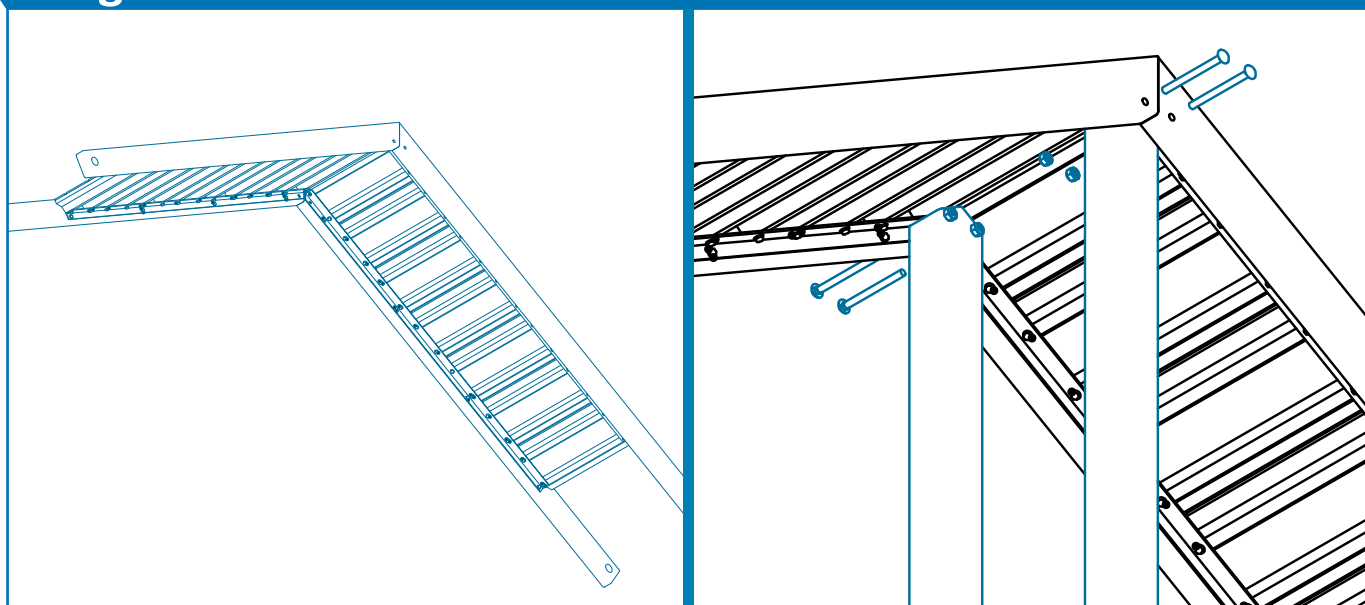

All dimensions are in millimetres (mm) unless specified.

