


Parts List

Ramp (x2)
Bridge (x1)
1100 mm Support Post (x4)
800 mm Support Post (x4)
120 mm Coach Bolt (x16)
40 mm Wafer Head Screws (x8)

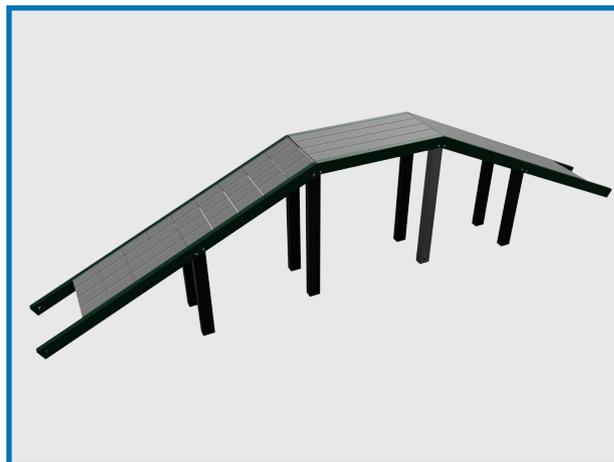

Instructions

We recommend assembling our products on a flat surface, taking care not to damage the plastic.

Step 1: Dig out the 8 holes for mounting the supports as per the hole layout provided.

Step 2: Fix the long legs (loosely) to the top section of the bridge with the cup head bolts provided and brace upright in position.


Step 3: Bring the ramps to the top section and fix to the top by securing the cup head bolts through the pre-drilled holes into the supports, then drive the 45mm wafer screws into the metal brackets.

Step 4: When the ramps are correctly aligned with the top, check that the legs are square then proceed to tighten all bolts that join the ramps and the legs.

Step 5: Place the remaining short legs into position (about half way down the ramp) and secure with cup head bolts.

Step 6: Brace well to prevent movement, fill holes with concrete, making sure that it is firmly packed around the posts.

Diagram

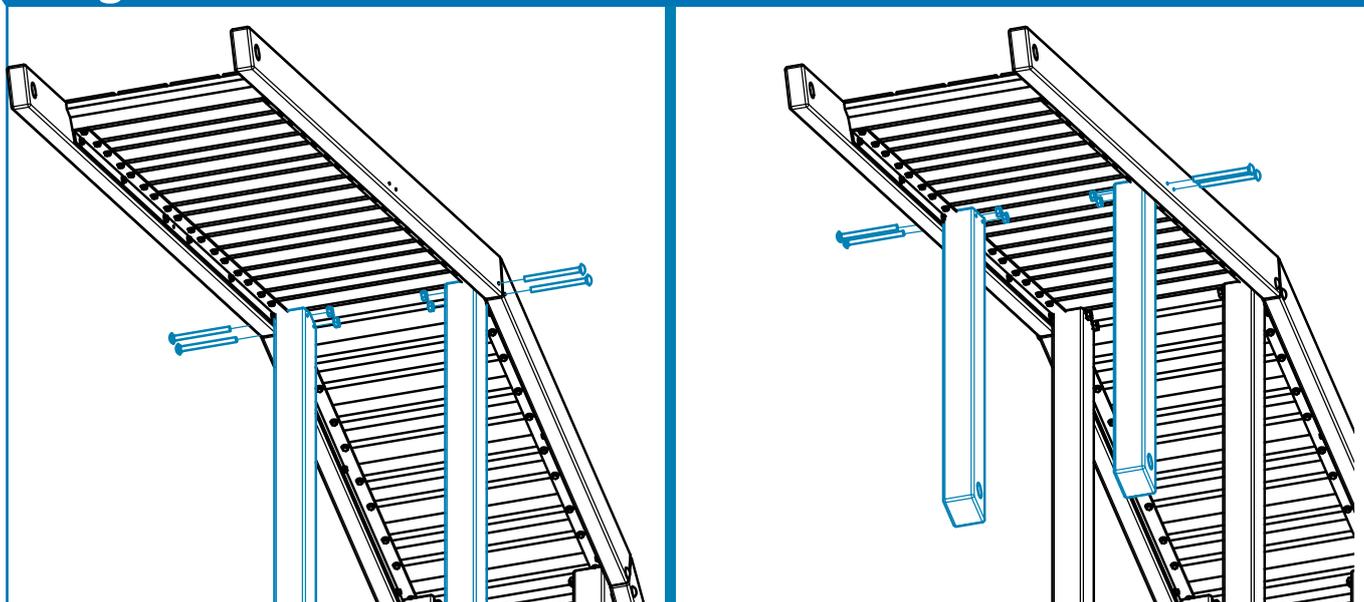

All dimensions are in millimetres (mm) unless specified.

