

Assembly Instructions Sit Stay Platform

1800 REPLAS

Parts List

Platform Top (x1)	
Platform Supports (x4)	
75 mm Bugle Screw (x8)	




Instructions

We recommend assembling our products on a flat surface, taking care not to damage the plastic.

- **Step 1:** Place platform face down on a flat surface.
- **Step 2:** Place supports into corners and using a 4.5 mm bit, drill a pilot hole through the slats into the support. Ensure supports are square before drilling pilot holes.
- Step 3: Attach the supports with the 75 mm Bugle screws provided.
- **Step 4:** Drill or dig holes approximately 400 mm deep as per the hole layout below.
- **Step 5:** Place the sit stay platform into position and brace to prevent movement or sagging, use a spirit level to ensure the platform is level.
- **Step 6:** Once positioned, fill holes with concrete. After the concrete has set remove bracing.

Diagram

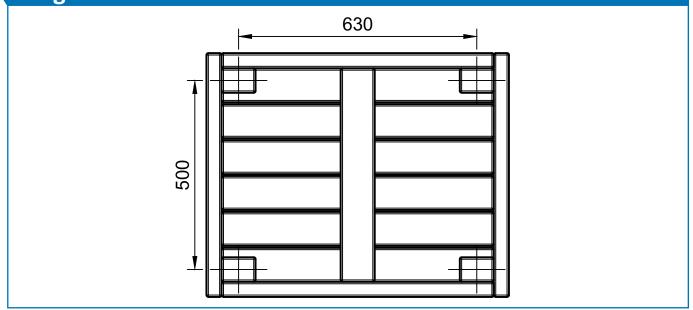

All dimensions are in millimetres (mm) unless specified.