

Parts List

40 x 90 x 1500 mm Slats (x15)

Tunnel Supports (x3)

35 mm Hex Screw (x45)



Instructions

We recommend assembling our products on a flat surface, taking care not to damage the plastic.


Step 1: Using the 35 mm Hex screws supplied, attach the slats onto the tunnel frames. Taking care not to over tighten as this could strip the thread in the slat.

Step 2: Drill or dig holes approximately 300 mm deep as per the diagram below.

Step 3: Place the supports of the assembled tunnel into the holes. Place into position and brace the tunnel to prevent movement and sagging. Use a spirit level to ensure the tunnel is level & supports are vertical.

Step 4: Once in position, fill the holes with concrete. Once the concrete is set, remove the bracing.

Diagram

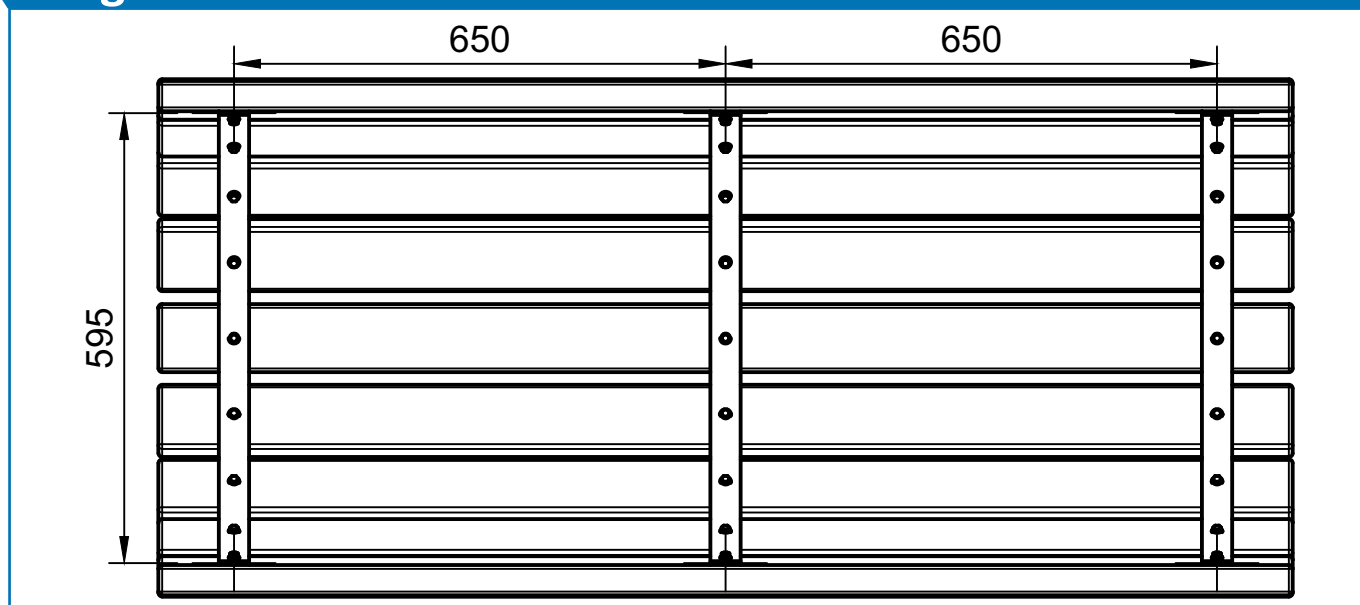

All dimensions are in millimetres (mm) unless specified.

If you require further assistance, please contact your supplier.

Ver 1 -