


Parts List

Jump Through - Assembled

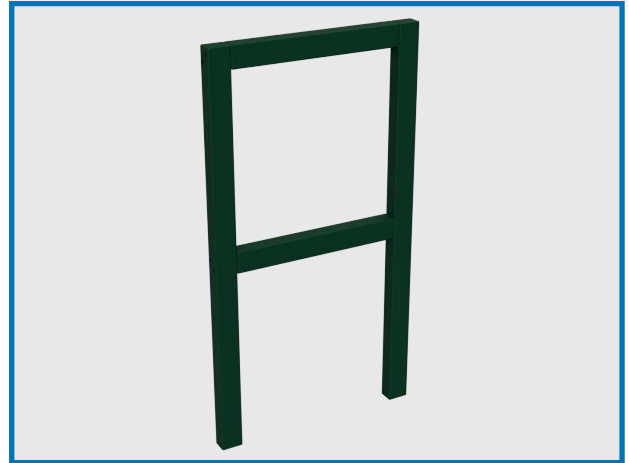


Instructions

We recommend assembling our products on a flat surface, taking care not to damage the plastic.

- Step 1:** Drill or dig holes approximately 650 mm deep (depending on the height you want the Jump Through above the ground) at 790 mm centres.
- Step 2:** Place supports of the Jump Through into the holes. Place into position and ensure that it is well braced to prevent movement or sagging. Use a spirit level to check that it is horizontal and the supports are vertical.
- Step 3:** Once satisfied that it is positioned correctly, fill the holes with concrete, making sure it is packed firmly around the supports. After the concrete has set, remove the bracing.

Diagram

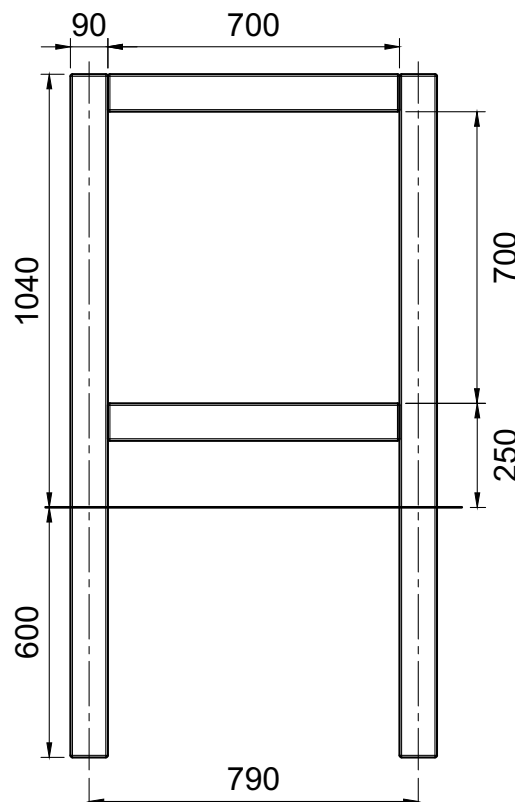

All dimensions are in millimetres (mm) unless specified.

If you require further assistance, please contact your supplier.

Ver 1 -