

### Parts List

40 x 90 x 1500 mm Slats (x15)

Tunnel Supports (x3)

50 mm Bugle Screw (x45)



### Instructions

We recommend assembling our products on a flat surface, taking care not to damage the plastic.


**Step 1:** Using the 50 mm bugle screws supplied, attach the slats onto the tunnel frames. Taking care not to over tighten as this could strip the thread in the slat.

**Step 2:** Drill or dig holes approximately 300 mm deep as per the diagram below.

**Step 3:** Place the supports of the assembled tunnel into the holes. Place into position and brace the tunnel to prevent movement and sagging. Use a spirit level to ensure the tunnel is level & supports are vertical.

**Step 4:** Once in position, fill the holes with concrete. Once the concrete is set, remove the bracing.

### Diagram

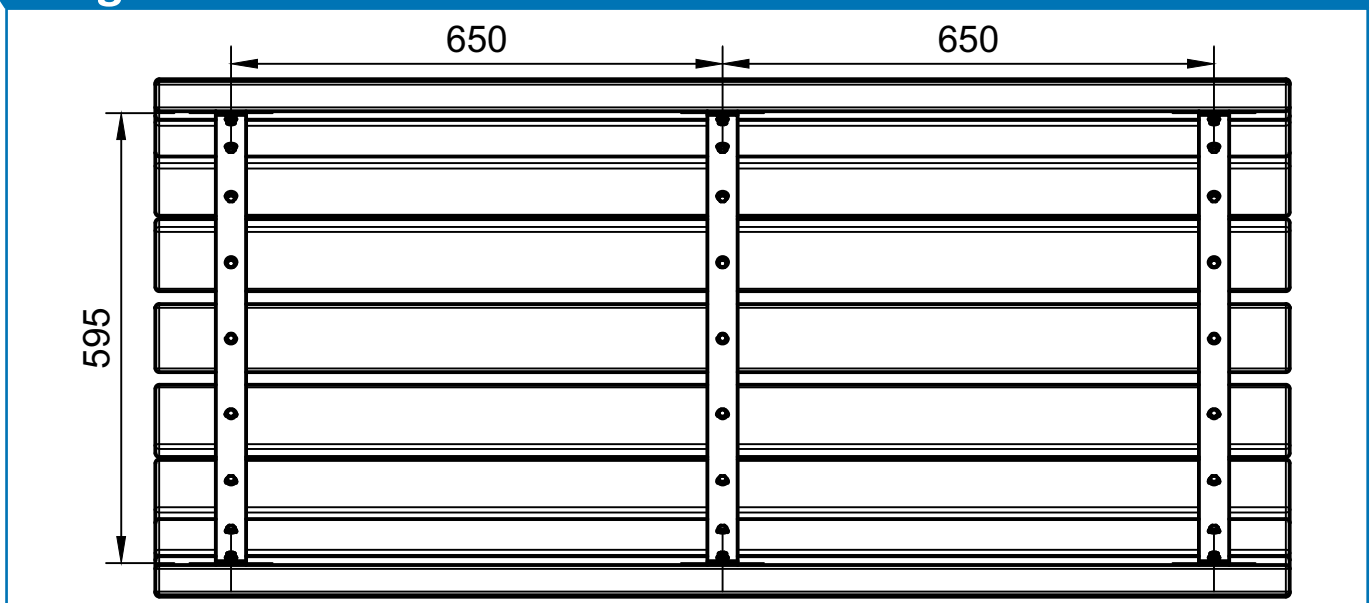

All dimensions are in millimetres (mm) unless specified.

If you require further assistance, please contact your supplier.

Ver 1 -