

Parts List

Side Wall (x2)
Top Slat (x4)
75 mm Bugle Screw (x16)



Instructions

We recommend assembling our products on a flat surface, taking care not to damage the plastic.


Step 1: Using the 75 mm bugle screws supplied, attach the top slats onto the tunnel walls, taking care not to over-tighten as this could strip the thread in the slat.

Step 2: Drill or dig holes approximately 400 mm deep as per the layout below.

Step 3: Place the supports of the assembled tunnel into the holes. Brace the tunnel to prevent movement and sagging. Use a spirit level to ensure the tunnel is level and the supports are vertical.

Step 4: Once in position, fill the holes with concrete. Once the concrete is set, remove the bracing.

Diagram

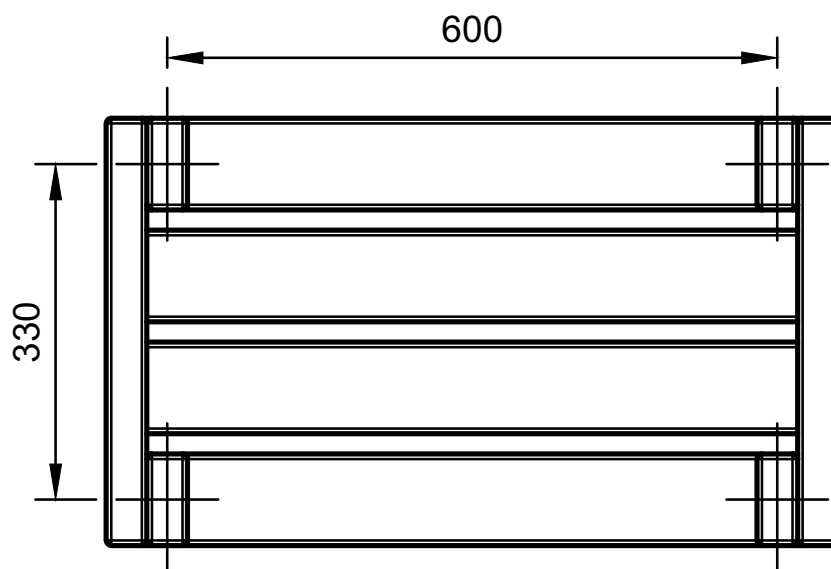

All dimensions are in millimetres (mm) unless specified.

If you require further assistance, please contact your supplier.

Ver 1 -